


CONDENSER REMOVAL

TO REMOVE CONDENSER FOR ENGINE SERVICE OR REPAIR.

1. REMOVE $\frac{1}{4}$ SCREWS ATTACHING CONDENSER TO SIDE BRACKETS.
2. LIFT CONDENSER AND SHROUD OFF BRACKETS AND SET BESIDE CAR.

CAUTION: HIGH PRESSURE FREON—
DO NOT DISCONNECT HOSES.

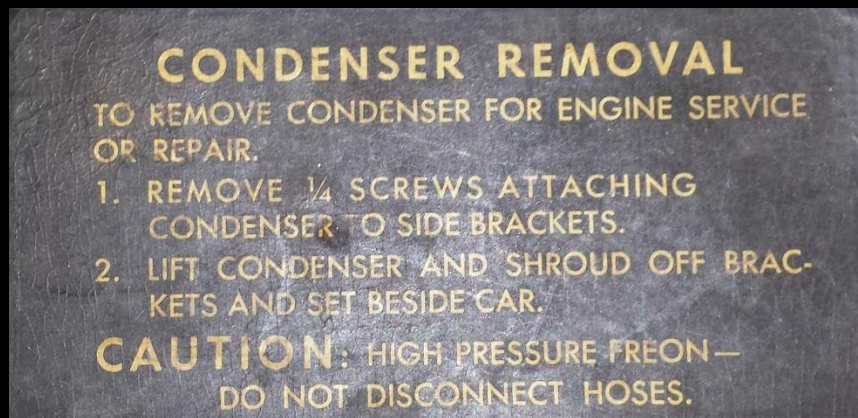

CONDENSER REMOVAL

TO REMOVE CONDENSER FOR ENGINE SERVICE OR REPAIR.

1. REMOVE $\frac{1}{4}$ SCREWS ATTACHING CONDENSER TO SIDE BRACKETS.
2. LIFT CONDENSER AND SHROUD OFF BRACKETS AND SET BESIDE CAR.

CAUTION: HIGH PRESSURE FREON—
DO NOT DISCONNECT HOSES.