

## LAMP—LUGGAGE COMPARTMENT

986043

CHEVROLET—CHEVELLE—CHEVY II—CORVAIR EXCEPT STATION WAGON

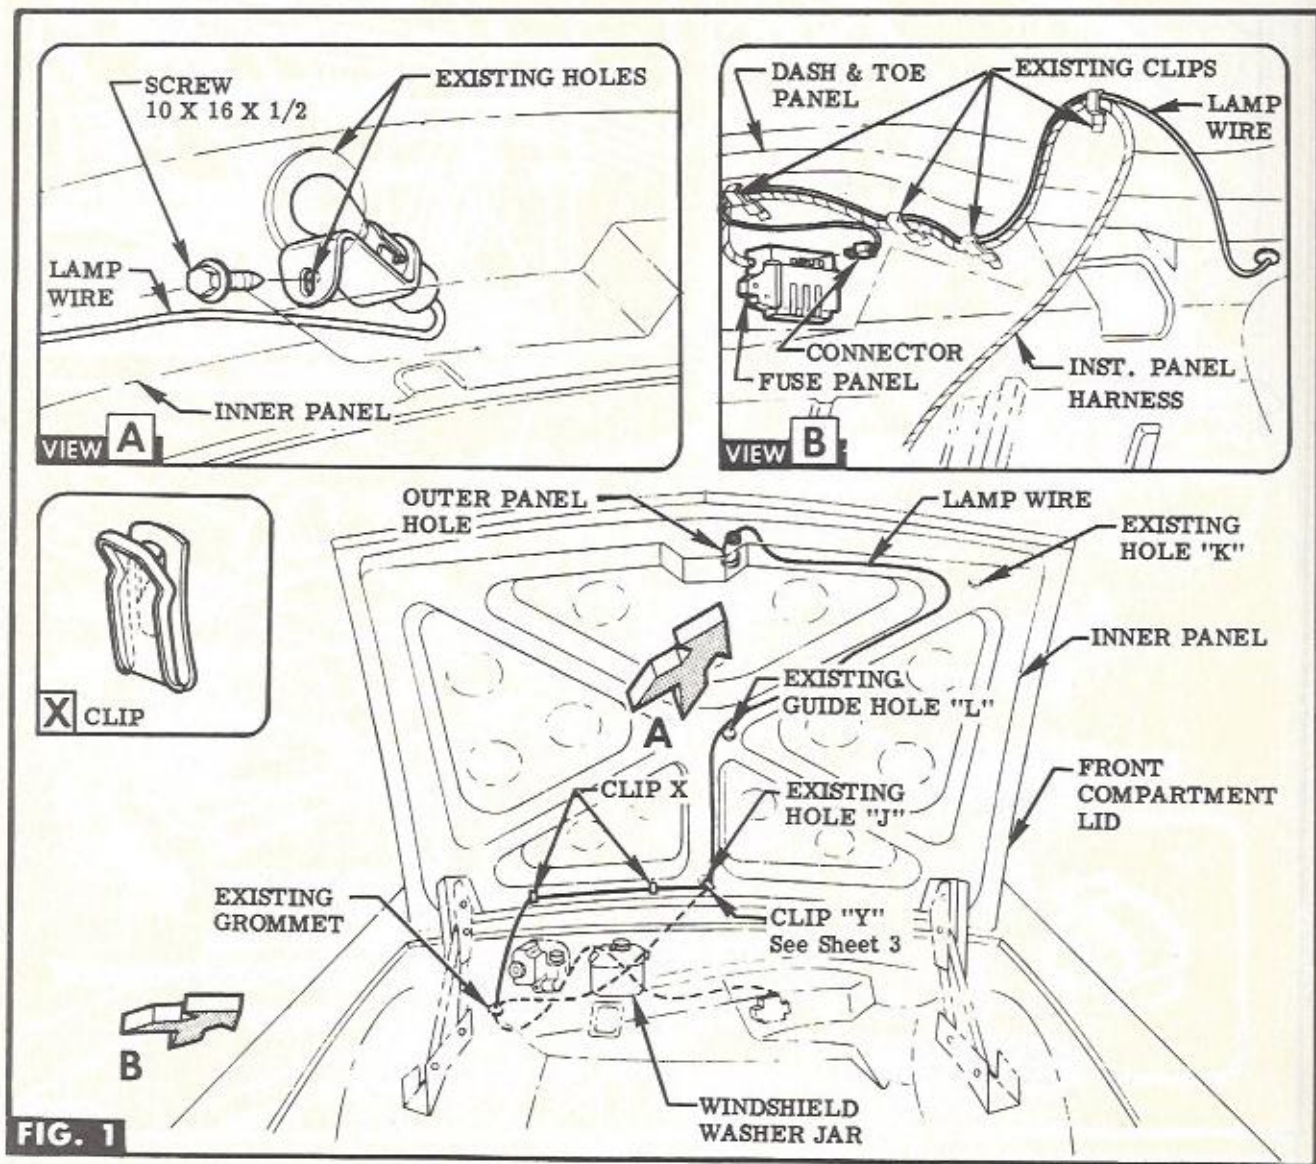


FIG. 1

## CORVAIR

**STEP 1** INSERT CURVED END OF LONG STIFF WIRE INTO HOLE "K". PUSH OVER TO HOLE IN INNER PANEL & FISH OUT. TAPE LAMP WIRE TO STIFF WIRE & PULL DOWN THRU HOLE "K". SEE FIG. 1.

**STEP 2** ROUTE STIFF WIRE BACK THRU HOLE "K" & DOWN PAST GUIDE HOLE "L" & PULL OUT THRU HOLE "J". SEE FIG. 1.

**STEP 3** UNTAPE LAMP WIRE FROM STIFF WIRE. SECURE LAMP WIRE AT HOLE "J" WITH CLIP "Y" PROVIDED. SEE FIG. 1.

**STEP 4** LOCATE LAMP ASM. IN INNER PANEL HOLE & ATTACH LAMP WITH SCREW PROVIDED. SEE VIEW A.

**STEP 5** ROUTE LAMP WIRE THRU EXISTING

GROMMET & ALONG EXISTING HARNESS TO FUSE PANEL ASM. SEE FIG. 1 & VIEW B. **NOTE** Route wire between bracket & jar on vehicles with windshield washers.

**STEP 6** CUT LAMP WIRE TO APPROPRIATE LENGTH & SOLDER FEMALE TERMINAL ON WIRE. SNAP PROVIDED CONNECTOR ONTO TERMINAL. SEE VIEW B & VIEW A SHEET 5.

**STEP 7** PLUG HARNESS WIRE CONNECTOR INTO OPENING IN FUSE PANEL ASM. MARKED "BATTERY". SEE VIEW B. **NOTE** If receptacle is occupied, remove existing wire & plug into back of connector.

**STEP 8** REPLACE ALL PARTS PREVIOUSLY REMOVED. **NOTE** Discard remaining parts.